

# KENT MULTI COOKER

Cook a variety of delicacies easily at home

**KENT**  
Smart Chef  
Appliances

HOUSE of PURITY

## Instruction Manual

INSTANTLY MAKES



Idlis



Noodles  
& Momos



Boils  
Eggs



Steams  
Vegetables



Makes  
Masala Tea

**KENT**  
Smart Chef  
Appliances

HOUSE of PURITY



Marketed by:  
**KENT RO SYSTEMS LTD.**  
E-6, 7 & 8, Sector-59, Noida, U. P. - 201 309, India.  
E-mail: sales@kent.co.in | Website: www.kent.co.in

Manufactured at:  
**KENT RO SYSTEMS LTD.**  
A-6, Sector-87, Noida-201305, U. P., India.  
A-7, Sector-87, Noida-201305, U. P., India.

For customer complaints, contact our Customer Care Officer at:  
E-6, 7 & 8, Sector-59, Noida,  
U. P. - 201 309, India. Call: 92-789-12345  
E-mail: service@kent.co.in or visit us at www.kent.co.in

Made in India



# Welcome to KENT

Dear Customer,

Congratulations on your purchase and welcome to **KENT**.

At the outset, allow us to thank you for your trust in **KENT Smart Chef Appliances**. At KENT, we take pride in our reputation for quality products and industry proven performance. We are certain that you will be more than satisfied with **KENT Multi Cooker's** performance and that it will serve you and your family's need without any compromise.

This guide would help you in getting the best out of your appliance. Please go through the booklet to familiarise yourself with its operation and maintenance.

With its robust build and quality, you can look forward to years of trouble-free service.

In case you require any further information, please contact your nearest **KENT** dealer or branch.

Bon Appétit

**KENT RO Systems Ltd.**

## TABLE OF CONTENTS

1. Introduction .....	1
2. Features of KENT Multi Cooker .....	1
3. Know Your Product .....	2
4. Items in the Box .....	2
5. Using KENT Multi Cooker .....	3
6. Recipes .....	3
7. Cleaning & Maintenance.....	5
8. Precautions .....	5
9. Important Safety Instructions .....	6
10. Troubleshooting .....	7
11. Technical Specifications .....	9

## INTRODUCTION

We at KENT have always believed that a clean and healthy life is a right of every individual. This ethos is what made us embark on the journey to develop innovative solutions for purifying the water we drink, the vegetables and fruits we eat, the homes we live in and the air we breathe.

With the use of innovative technology and supported by a competent service network, we have been able to create a brand which has become synonymous with well-being and health.

Continuing the tradition, we now present the KENT Multi Cooker for a home-cooked and healthy diet.

Cooking, boiling, and steaming gets easier and better. Presenting KENT Multi Cooker. With a power of 800W, it comes with a cool-touch handle and an auto shut-off mode to ensure safety and convenience. Whether it is boiling eggs, making idlis, steaming vegetables or cooking noodles, you can do it all perfectly and easily.

## FEATURES OF KENT MULTI COOKER

1. Comes with multi-cooking feature
2. An ideal cooking tool for small families and bachelors
3. Better response to temperature change ensures cooking in less time
4. Comes with cool-touch handle to ensure safety
5. Compact design with transparent lid
6. Easy-to-use and portable
7. Auto turn-off feature
8. Swivel power base
9. Easy to clean and store
10. Makes idlis, noodles and momos. Boils eggs and makes masala tea. It also steams vegetables

## KNOW YOUR PRODUCT



## ITEMS IN THE BOX

- |                               |   |     |
|-------------------------------|---|-----|
| 1. KENT Multi Cooker with Lid | : | 1 N |
| 2. Idli Tray                  | : | 2 N |
| 3. Egg Tray with Handle       | : | 1 N |
| 4. Power Base                 | : | 1 N |
| 5. Warranty Card              | : | 1 N |

## USING KENT MULTI COOKER

1. Remove any stickers that may prevent unit operation.
2. Check the unit for damage. Do not use in case of any damage.
3. Before switching on the appliance, make sure that your home's main voltage corresponds to that of the unit operation.
4. Clean the washable parts of the appliance thoroughly before using for the first time (refer to the 'Cleaning & Maintenance' section).
5. Make sure all parts are completely dry before you start using the appliance.
6. Maximum capacity of the cooker is 1.2 L.
7. Please do not add more water than the level indicated on the inner pot.
8. Before using, ensure that nothing is stuck between heating plate and the bottom of the inner pot. If anything is found, please clean it.
9. Ensure that the inner pot is properly secured in its place.

## RECIPES

### Boiling Water

- Step 1:** Remove the glass cover and fill with water, which should neither be lower than the lowest water line nor higher than the highest water line. Close the unit with the glass cover.
- Step 2:** Plug the power cord into a power source and press the temperature button to "High". At this time, the indicator will light up and the unit will start to operate.
- Step 3:** When water boils, press the temperature control button to "Off". At this time, the indicator will be off and the unit will stop heating.

### Cooking Noodles

- Step 1:** Remove the glass cover and fill with water, which should neither be lower than the lowest water line nor higher than the highest water line. Close the unit with the glass cover.
- Step 2:** Plug the power cord into a power source and turn the temperature control button to "High". At this time, the indicator will light up and the unit will start to operate.

- Step 3:** When water boils, please put the noodle into the cooker. Then the temperature of the water will be lowered. When water boils again, please put seasonings in it and mix them.

### Chafing Dish

- Step 1:** Remove the glass cover and fill with water, which should neither be lower than the lowest water line nor higher than the highest water line. Close the unit with the glass cover.
- Step 2:** Plug the power cord into a power source and turn the temperature control button to "High". At this time, the indicator will light up and the unit will start to operate.
- Step 3:** When water boils, please put the food into the cooker. The food can be eaten once it is done. If you want a lower temperature, please press the temperature control to "Low" and at that time only the lower indicator will light up. If you want to stop heating, turn the temperature control press to "Off" to shut off power.

### Steaming Egg/Warming Up Dish

- Step 1:** Remove the glass cover and fill in appropriate amount of water. Put the plastic steamer in the cooker. Mix the egg whites with the egg yolks before putting the plastic dish onto the plastic steamer. Close unit with the glass cover.
- Step 2:** Plug the power cord into a power source and turn the temperature control to "High". At this time, the indicator will light up the unit will start to operate.
- Step 3:** The water will boil after 7-8 minutes. When the steaming is finished, press the temperature control button to "Low" for a while. To shut off the power when it is done, press the temperature control button to "Off".

## CLEANING & MAINTENANCE

1. Unplug the KENT Multi Cooker before cleaning it.
2. After using the appliance, wait for it to cool before cleaning it.
3. Use only a moist cloth to wipe the outside and inside body of the KENT Multi Cooker.
4. Use hot water, detergent and sponge to clean the inner pot. Don't use steel wool.
5. If food sticks to the inner pot, you can soak for a moment before cleaning.
6. Clean the inner lid, inner pot, egg boiler tray and idli tray with a sponge or a cloth, hot water and some dish washing liquid.
7. If there is water on hot plate, use a dry cloth to wipe it.
8. When not in use for a long time, unplug the appliance and store it in a dry place.
9. The power cord should be unplugged before cleaning. Start cleaning when the body is cold completely.

**Note:** Never immerse the body of the KENT Multi Cooker in water, nor rinse it under a tap. Wipe the heating element with a dry cloth.

## PRECAUTIONS

1. Do not disassemble, repair or alter the appliance on your own. It may cause appliance failure or breakdown.
2. The input voltage must not exceed the rating, as it might damage the appliance.
3. Unplug before cleaning/moving the appliance.
4. Do not use the appliance with a damaged power cord or plug.
5. If the power cord is damaged, replace it with a genuine KENT spare.
6. Do not install the appliance near any heat source, e.g., heater.
7. If the appliance is not in use for longer time, unplug it.
8. Do not sit on, stand on or shake the appliance.
9. Do not use the appliance in a recumbent or inclined position.

## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

1. The product should be used with its own power base. Please note that it cannot be used with other product's power base.
2. Please wipe the water (if there is any) at the bottom of the body before putting it on the power base.
3. When operating, please keep close supervision to the unit. Don't leave the unit unattended during operation as it may cause accidents.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. When using, place the product on a flat surface. Don't place the product near other sources of heat and / or other electric appliance.
6. When operating the product, don't touch the stainless steel pot or the steam rising from the glass cover so as to avoid being scalded.
7. Water should be not be added above the maximum water line in order to prevent being scalded by spilling boiling water. Water should also not be added below the lowest water line to prevent the hot plate against dry heating, thus damaging the product. The unit must be covered up with glass cover when boiling water.
8. When using the unit for the first time, water should be added to the maximum water line. Pour the water off after it boils to clean the pot.
9. Don't hang the power cord at the table or surfaces near other high temperature objects.
10. Cleaning the bottom cap and power base in water or other liquids is prohibited as it may cause short circuit.
11. The voltage of the power source should be the same as indicated on the unit's rating label.
12. If the supply cord is damaged, it must be replaced by 3D or its authorized service center or a similarly qualified person in order to avoid hazard. Extension power cords cannot be used unless being tested by a professional.

13. Power cannot be connected under the following conditions:

- a. No water in the electric cooker.
- b. When filling water, cleaning or moving the product.

14. If there is anything wrong with the product, please take it to any 3D service center for repairs. It is not suggested for users to repair the unit by themselves. Please don't remove or tinker with the bottom cap or electric base because it may cause electric accidents.

15. This appliance is intended to be used in household and similar applications such as:

- Staff Kitchen areas in shops, offices and other working environments.
- Bed and breakfast type environments.
- Farm houses, Clients in hotels, motels and other residential type environments.

16. DO NOT operate without water.

17. Children should be supervised to be sure not to play with the appliance. Keep the appliance out of the reach of children.


## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The 'Cook' light indicator does not light up.	There is a connection problem.	Check if the appliance is connected to the mains and if the plug is inserted firmly into the wall socket.
	The light is defective.	Switch off the appliance and unplug it. Go to the nearest KENT authorised service centre for assistance.
The steamed vegetables are not cooked properly.	Not enough water was used for steaming.	Make sure that you add water in accordance with the scale on the inner pot (see the section on 'Using the Appliance').

## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The vegetables are still raw.	Not enough water has been added.	Add water in accordance with the scale on the inner pot (see chapter 'Using the Appliance').
	The cooking process has not started.	The appliance has not been started. Press the correct button.
	The inner pot is not properly in contact with the heating element.	Make sure that there is no foreign residue on the heating element.
	The heating element is damaged.	Switch off the appliance and unplug it. Go to the nearest KENT authorised service centre for assistance.
The steamed vegetables are soggy.	Too much water was used for steaming.	Make sure you add water in accordance with the scale on the inner pot (see the section on 'Using the Appliance').
	Incorrect menu has been selected.	Select proper menu (see the section 'Using the Appliance').
The noodles are overcooked and mushy.	Too much water was used.	Make sure you add water in accordance with the scale on the inner pot (see the section on 'Using the Appliance').
Cooked noodles are too hard.	Not enough water was used.	Add slightly more water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of noodles used. Make sure the water does not exceed the next level on the scale, as this may cause overflow during cooking.
The noodles are not cooked.	Not enough water has been added.	Make sure you add water in accordance with the scale on the inner pot (see the section on 'Using the Appliance').
	The cooking process has not started.	The appliance has not been started. Press the correct button.
	The inner pot is not properly in contact with the heating element.	Make sure that there is no foreign residue on the heating element.
	The heating element is damaged.	Switch off the appliance and unplug it. Go to the nearest KENT authorised service centre for assistance.
The noodles are scorched.	The noodles have not been rinsed well.	Rinse the noodles until water runs clear.

## TECHNICAL SPECIFICATIONS

Product	KENT Multi Cooker
Product Code	16114
Net Weight	1.06 kg
Input Power Supply	Single Phase 230 V AC, 50 Hz. 
Total Power Consumption	800 W
Capacity	1.2 L